



VAPOR BARRIER DETAIL CEILING APPLICATION (WITH FINISHED CEILING)

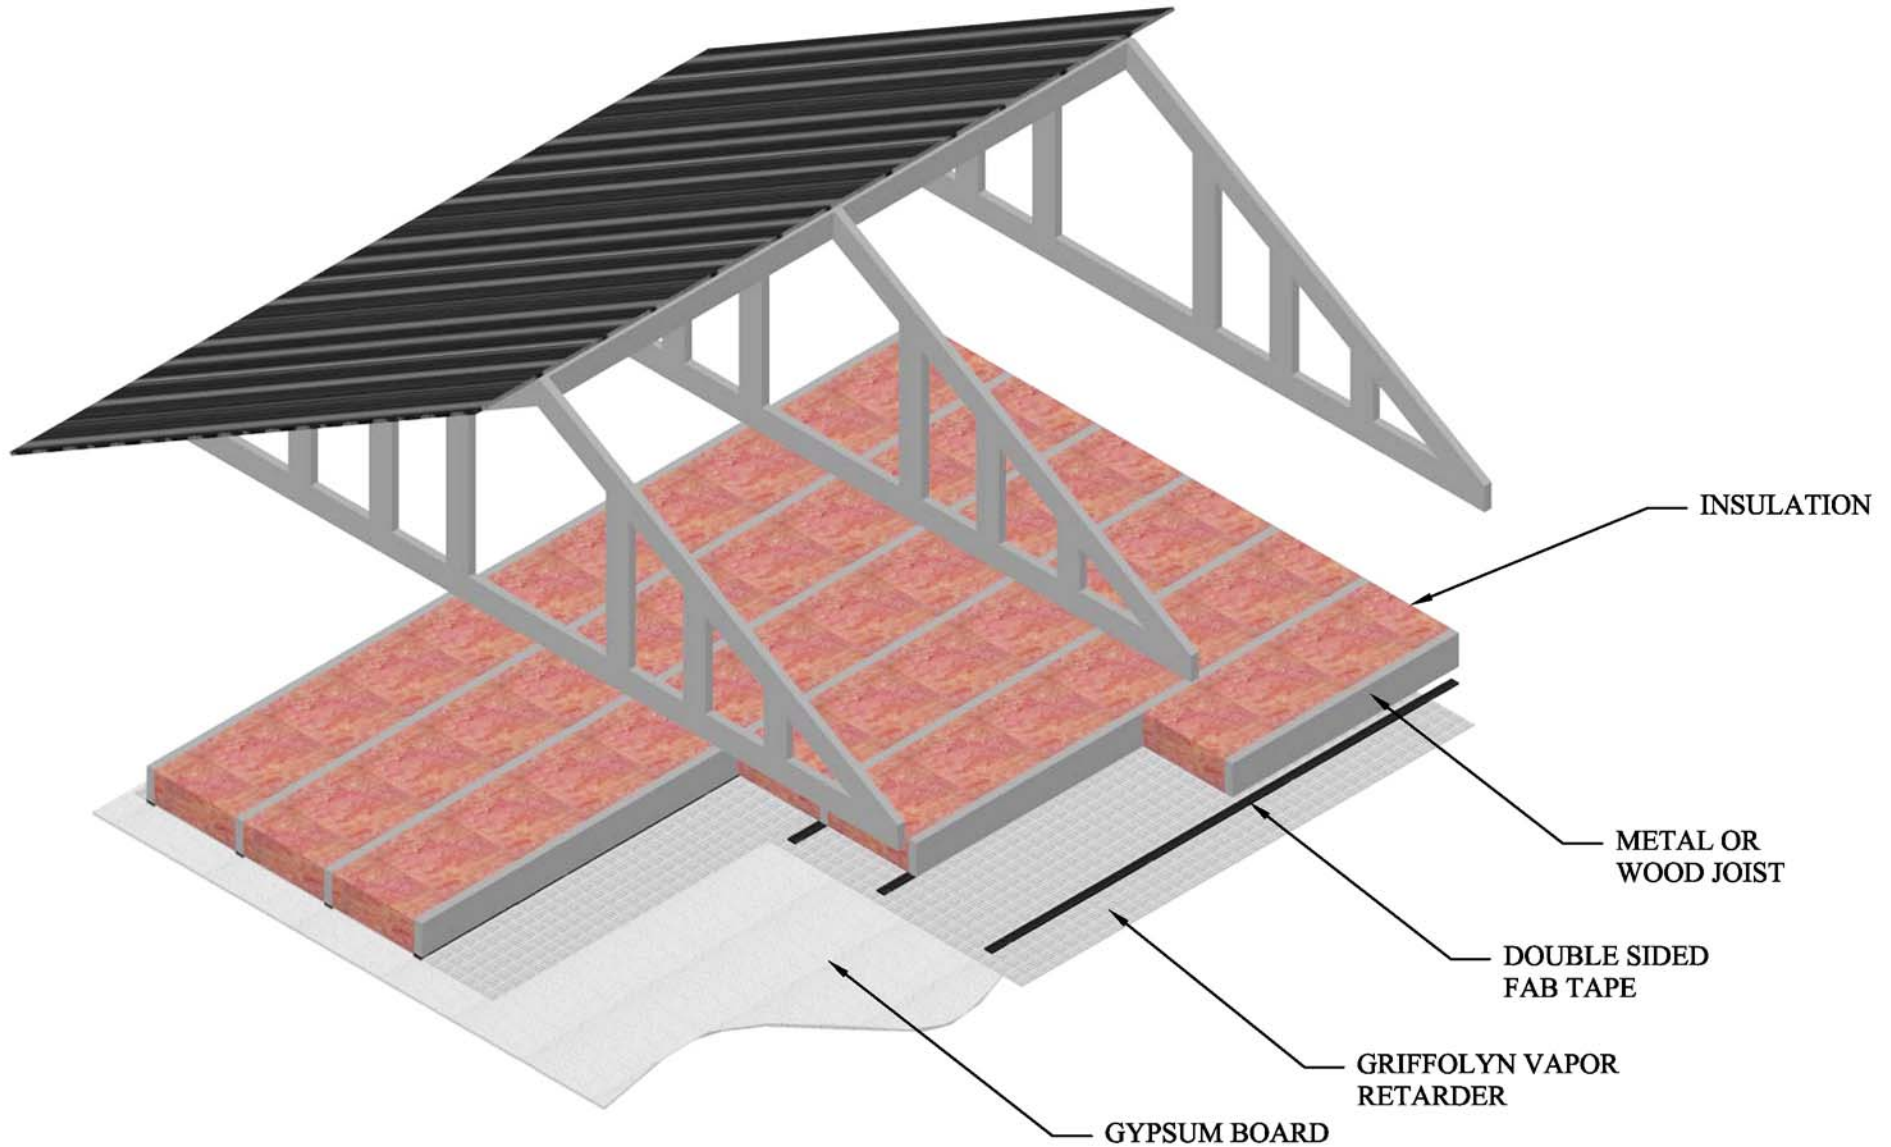

NOTE: This document does not attempt to address all aspects of an installation for all applications. The information presented is general information in order to familiarize the individual with the overall scope of the project.

VAPOR BARRIER DETAIL CEILING APPLICATION (WITH FINISHED CEILING)


STEP 1
APPLY DOUBLE SIDED FAB
TAPE TO BOTTOM OF
METAL OR WOOD JOIST

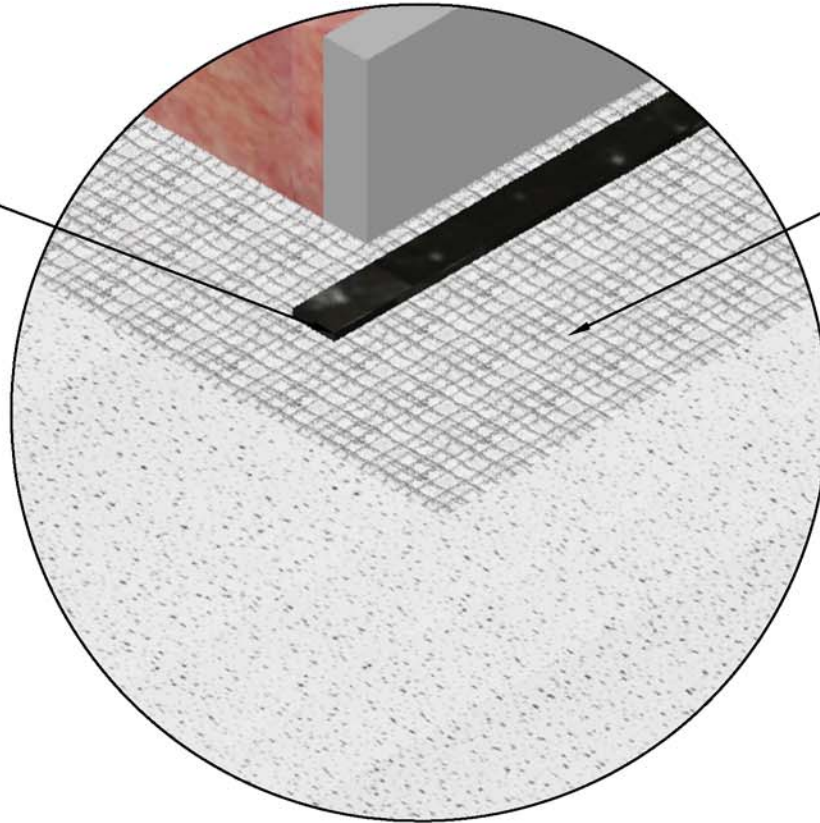

STEP 2
ATTACH GRIFFOLYN VAPOR
RETARDER TO FAB TAPE


NOTE: This document does not attempt to address all aspects of an installation for all applications. The information presented is general information in order to familiarize the individual with the overall scope of the project.

VAPOR BARRIER DETAIL CEILING APPLICATION (WITHOUT FINISHED CEILING)

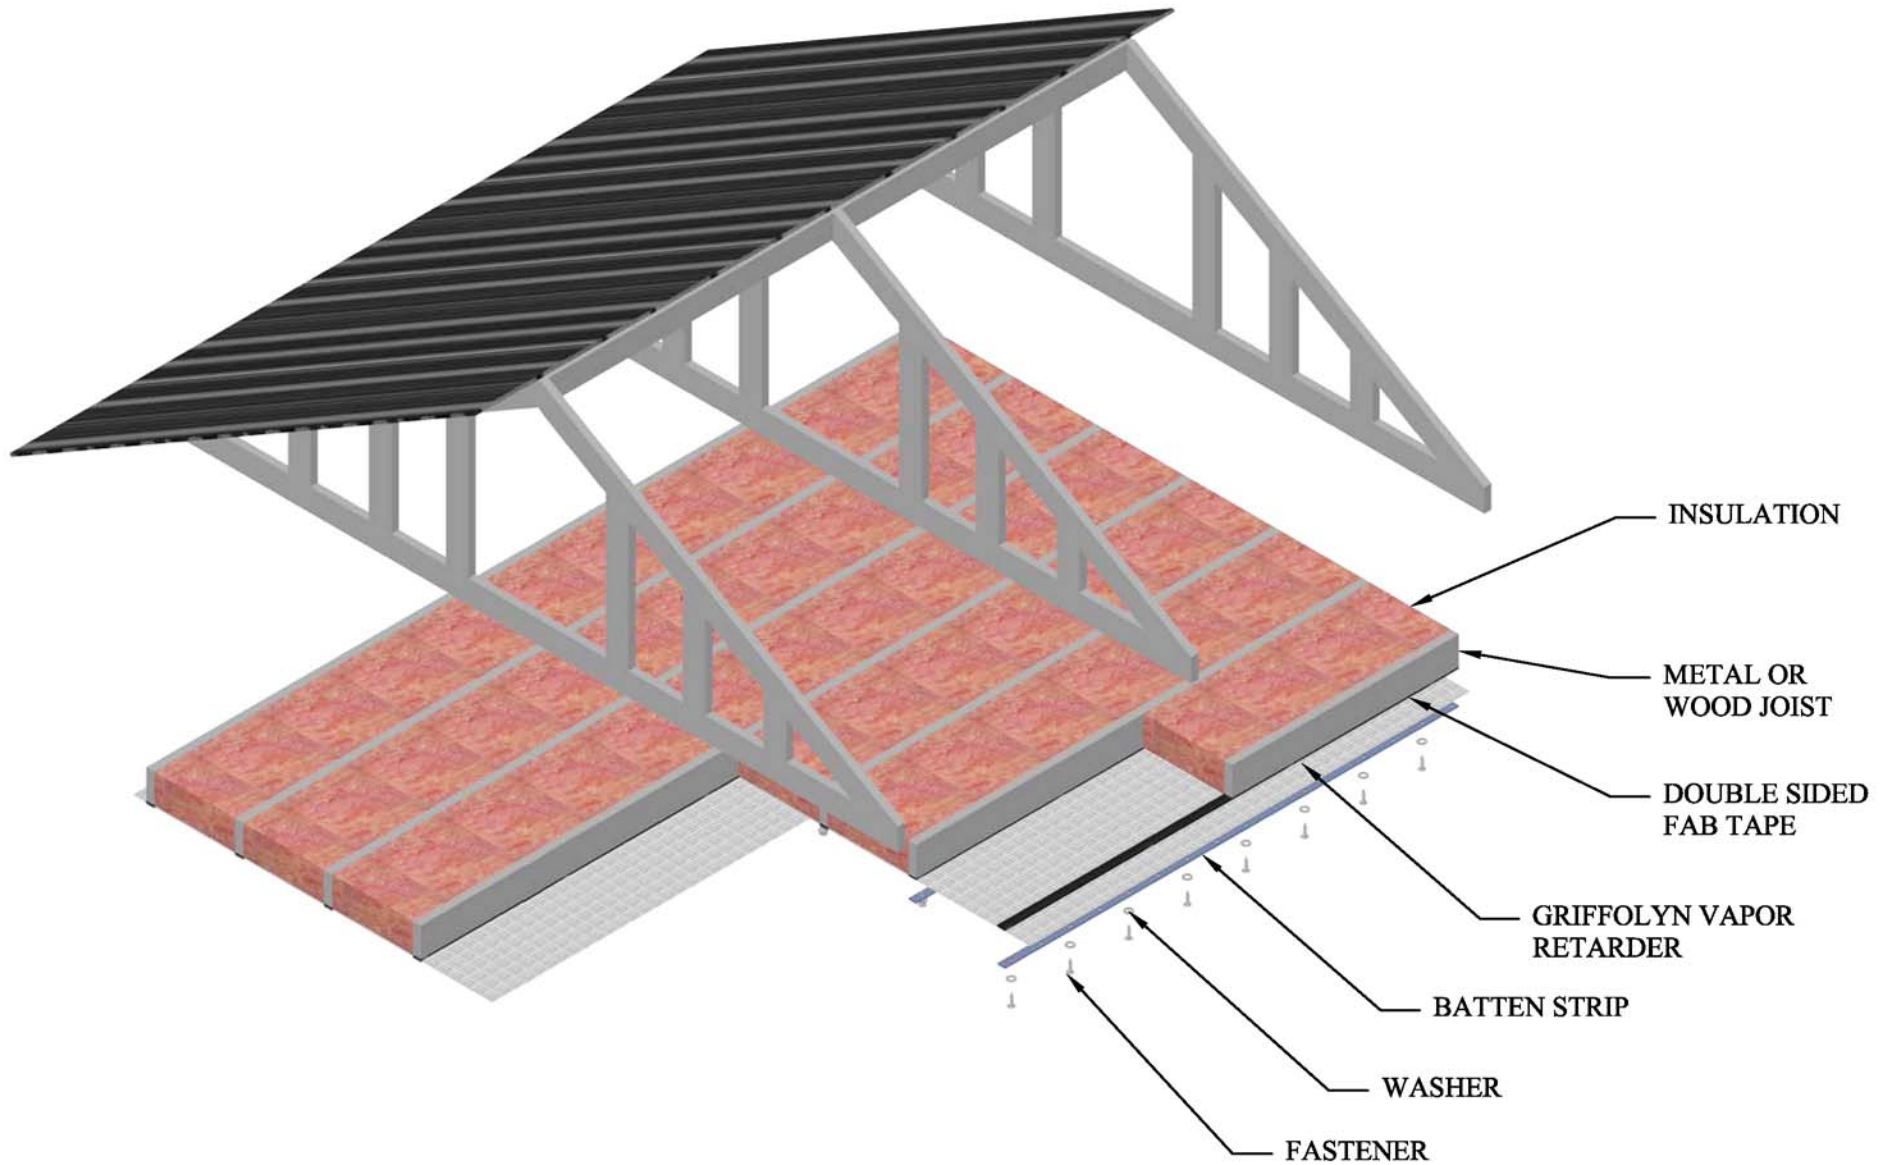

NOTE: This document does not attempt to address all aspects of an installation for all applications. The information presented is general information in order to familiarize the individual with the overall scope of the project.

VAPOR BARRIER DETAIL CEILING APPLICATION (WITHOUT FINISHED CEILING)

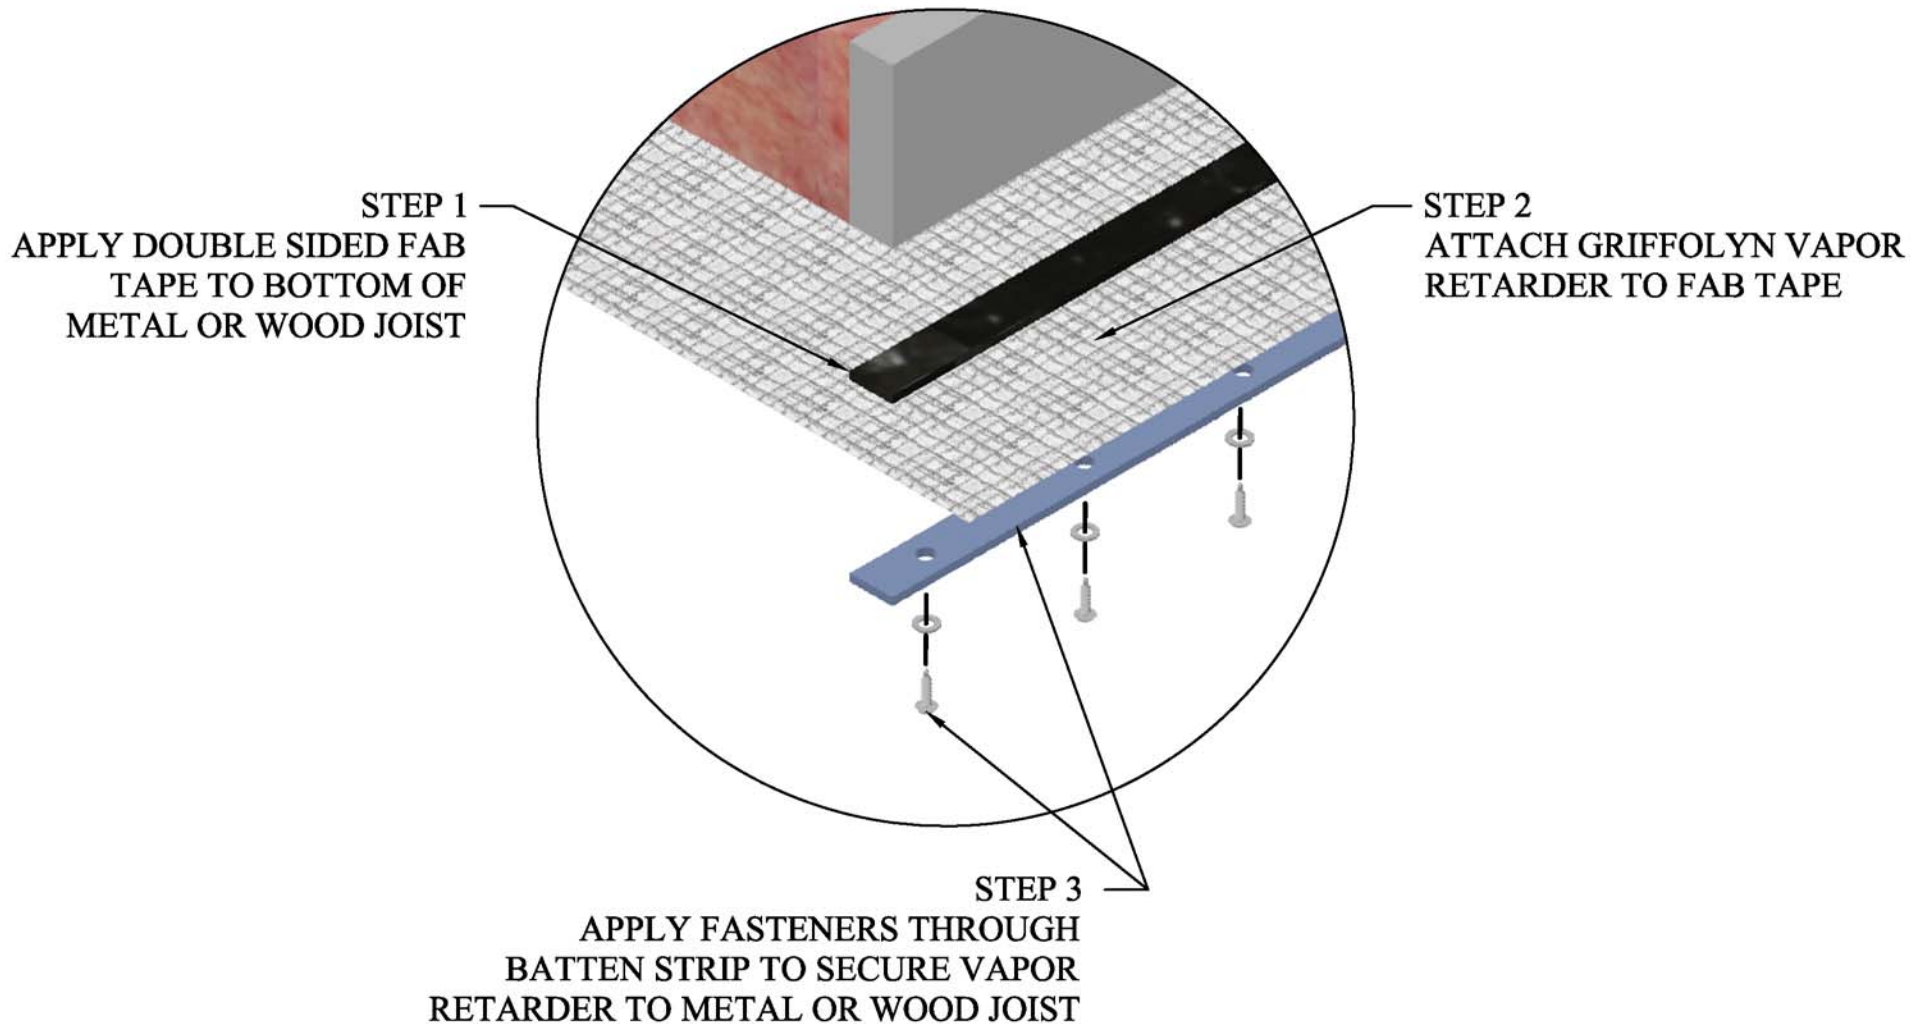

NOTE: This document does not attempt to address all aspects of an installation for all applications. The information presented is general information in order to familiarize the individual with the overall scope of the project.